




Installation Guide

Lower Centre X Brace ND


ND0-0962

04.2017

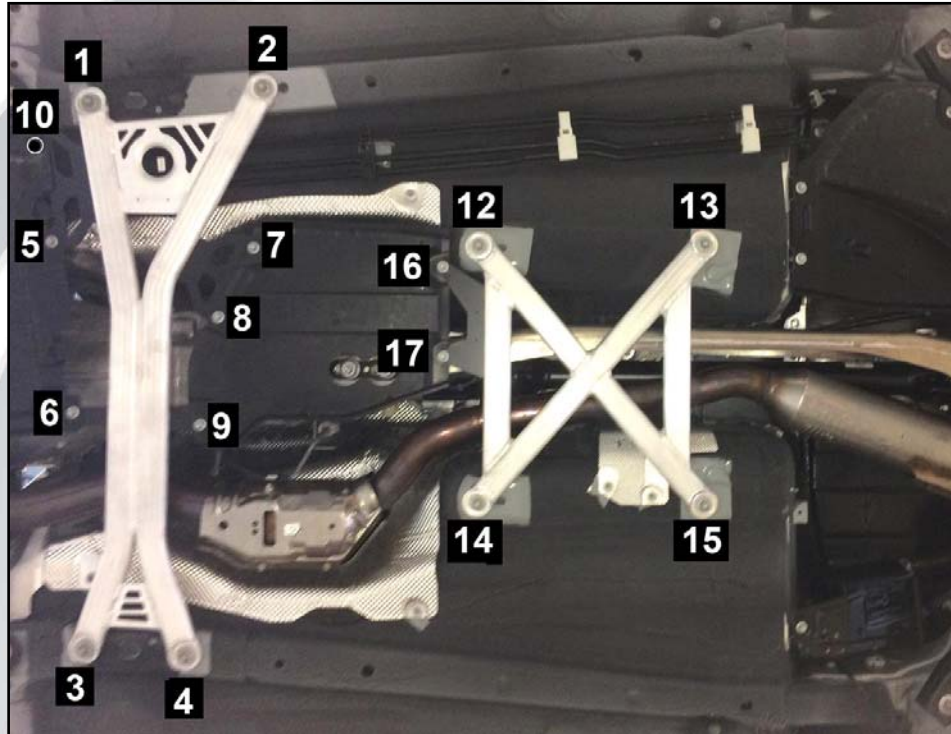

pic 1

To install the center X brace please loosen and remove screws 12 to 17 and remove the OEM brace (pic 1)
Now install the center X brace (pic 2) with the OEM screws on mounting points 12 to 15, use the supplied nuts and OEM screws on mounting points 16 and 17.

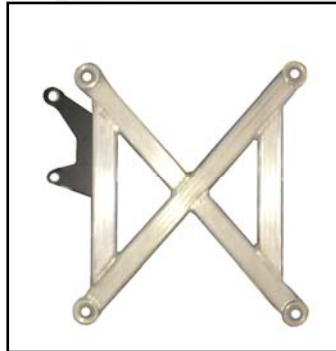

pic 2

Please check tightness / fitment of the X brace after torquing the screws to the below values

torque value and mounting points:

- 12 → 18 - 26 Nm
- 13 → 18 - 26 Nm
- 14 → 18 - 26 Nm
- 15 → 18 - 26 Nm
- 16 → 6 - 10 Nm
- 17 → 6 - 10 Nm